



AVENTOS HS

Wood / wide aluminum hardware pack

Package contents




2 x 20S4200
Wood/wide alum.
mounting plate

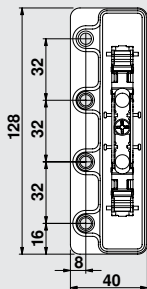


2 x 20S4F01
Wood/wide alum.
mounting plate
with bracket



POZI #2x2 driver bit
for adjusting tension

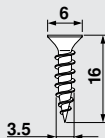

22 x 606P Wood
door screws for
mounting plates

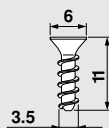

18 x 699.110
Aluminum door
screws for
mounting plates

Hardware set

Part no.

20S4200.A1

Also required (sold separately)



Lift mechanism set

Set includes:


- 2 x Lift mechanisms
- 2 x Cover plates (right and left)
- 2 x Cover caps
- 2 x Arm assembly (right and left)
- 2 x Stabilizer rod cover caps
- 2 x Stabilizer rod adapters
- 10 x #7x35mm (1-3/8") wood screws



Stabilizer rod

- Cut to length
- Length =
- Interior cabinet opening - 120 mm

Assembly


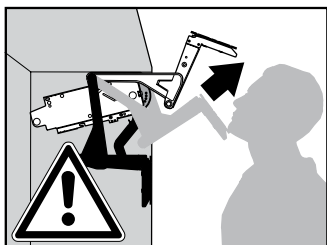


WARNING

Risk of injury from spring-loaded arm

- Do not push arm assembly down or leave in the down position
- Remove arm assembly from mechanism before installing or removing cabinet

1 Locating pin locations and other dimensions

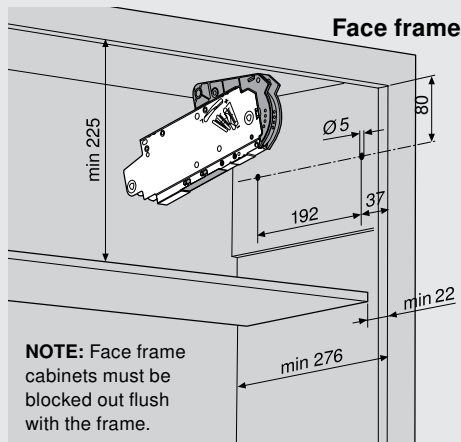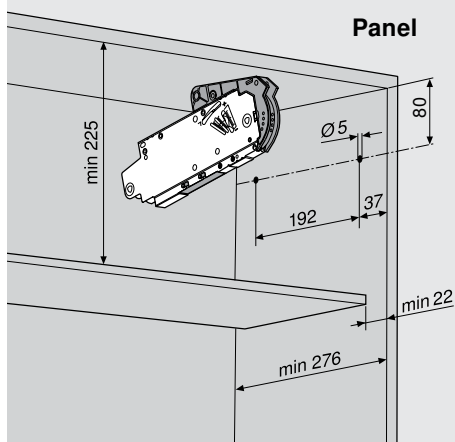

NOTE: Face frame cabinets must be blocked out flush with the frame.

Part no.

AVENTOS boring template is available for preboring 5mm locating pins

65.5020

2 Attaching the lift mechanism

After aligning the lift mechanism into the cabinet using the locator pins, attach the mechanism with the five mounting screws provided.

5 x wood screws $\varnothing 7 \times 35$ mm (1-3/8")

